

Conector 90° e 180° 90° and 180° UTP Modular Jack


90°



180°



1 Espalhe os fios.
Fan out wires.

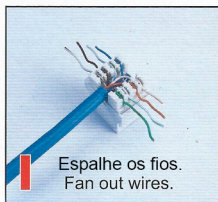


1 Espalhe os fios.
Fan out wires.



Utilize a ferramenta de climpar
Use the crimping tool.

or/
ou/

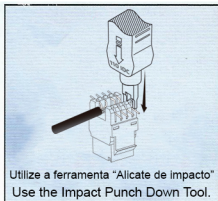

Utilize a ferramenta "Alicate de Impacto"
Use the Impact Punch Down Tool.



2 Comprima a alça
Compress handle.



2 Comprima a alça
Compress handle.



3 Remova o conector. Feito!
Remove jack. Done !



3 Remova o conector. Feito!
Remove jack. Done !